



# STROBO+PLUS HD™



## **PLEASE READ this important information regarding your StrobePLUS HD**

Thank you for purchasing the Peterson StrobePLUS HD tuner. Please register your product with the Peterson Connect website



**[www.petersontuners.com/connect](http://www.petersontuners.com/connect)**

- Receive discounts on accessories for your product upon registering.
- Upgrade your StrobePLUS HD to include the extremely versatile BodyBeat Metronome.\*
- Keep your product's firmware up to date with all of the latest enhancements for free.
- Go beyond the basics by customizing and sharing tunings via the Peterson Connect website.
- **Register within 72 hours of your purchase and extend your warranty by 90 days!**



STROBOPLUS HD

\* The BodyBeat Metronome upgrade doubles the functionality of your StrobePLUS HD by giving you access to the exact same metronome engine developed for the award-winning Peterson BodyBeat Sync® Metronome! Register your product now for discounted pricing on this upgrade.

*Note: Registering your product is NOT necessary for basic operation. The StrobePLUS HD will work out of the box with immediate access to over 90 Sweetened™ Tunings!*

See opposite side for "Quick Start" instructions



# STROB<sup>+</sup>PLUS HD™

## Quick Start Guide

➤ Prefer to watch a **video**? View the video quick start guide at [www.peterson tuners.com/stroboplus/quickstart](http://www.peterson tuners.com/stroboplus/quickstart)



**To turn your StrobePlus HD on and off**, press and hold the Power Button for two seconds.



**MODE** To change the mode of operation between Visual Tuner, Audible Tuner and Metronome\*, press the Mode Button.



**START** To hear a pitch in Audible Tuning Mode or to start the metronome in Metronome Mode\*, press the Start Button.



**Use the provided USB cable** to charge your Lithium-Ion battery with either a 5-Volt USB charger or your computer's USB port.



The StrobePLUS HD visual tuning display features two strobe bands and a note name. Carefully adjust the tuning of your instrument until the display no longer turns left ( flat ) or right ( sharp ). When the display is still, you are within 1/10th of 1 cent.

***i** If you are new to strobe tuners, you will want to adjust your "touch" while tuning to account for the superior accuracy and sensitivity. Activate the string gently with your thumb or finger instead of a pick. You won't need to rearticulate the string as often.*

If you experience any problems, please do NOT return the product to the seller. First check out the FAQ at [peterson tuners.com](http://peterson tuners.com). If you continue to have issues, open a helpdesk ticket or contact us directly at 1-708-388-3311. Like any Peterson product, your full satisfaction is guaranteed.

See opposite side for important product information

